

GRT III Trigger Installation in Quest and B-18/19's

Use the Left and Right Arrow
Keys to Move Forward and Back
Through the Slides

Pre-Installation Front Side



Pre-Installation Reverse Side



Remove Clip From Pin



Start to Push Pin Out



Completely Remove Pin



Pin Removed From Old Trigger



Begin to Remove Old Trigger



Old Trigger Out



Depress Spring in Trigger and Slide Out Fat Trigger Pin



Fat Pin Out



Remove Old Adjustment Screw




Old Adjustment Screw Being Removed



Fat Pin in GRT III Trigger




Slide GRT III Trigger in Housing

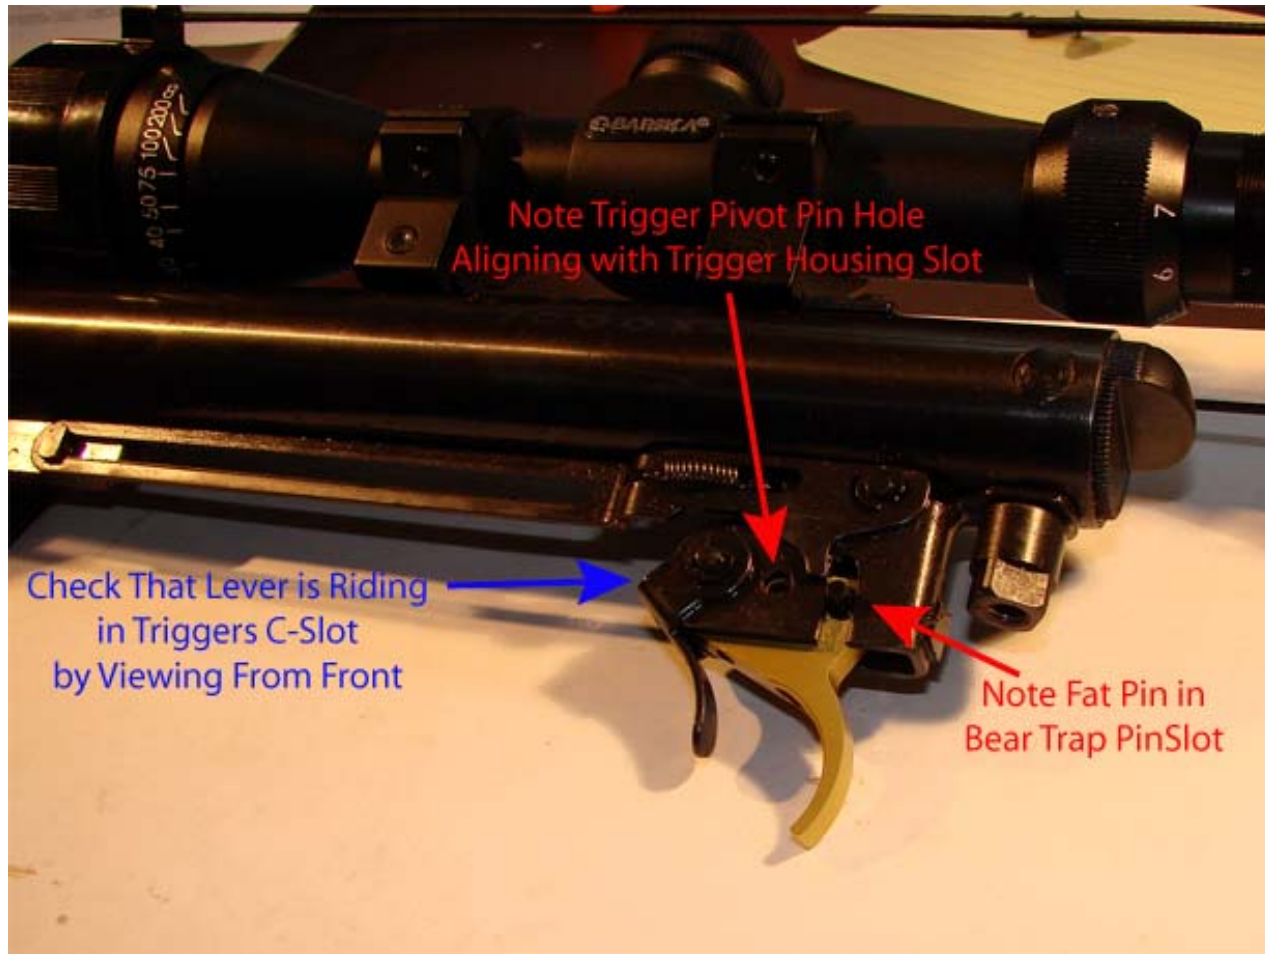

Pivot Pin Through Trigger Housing and Trigger



Place Clip on Trigger Pivot Pin

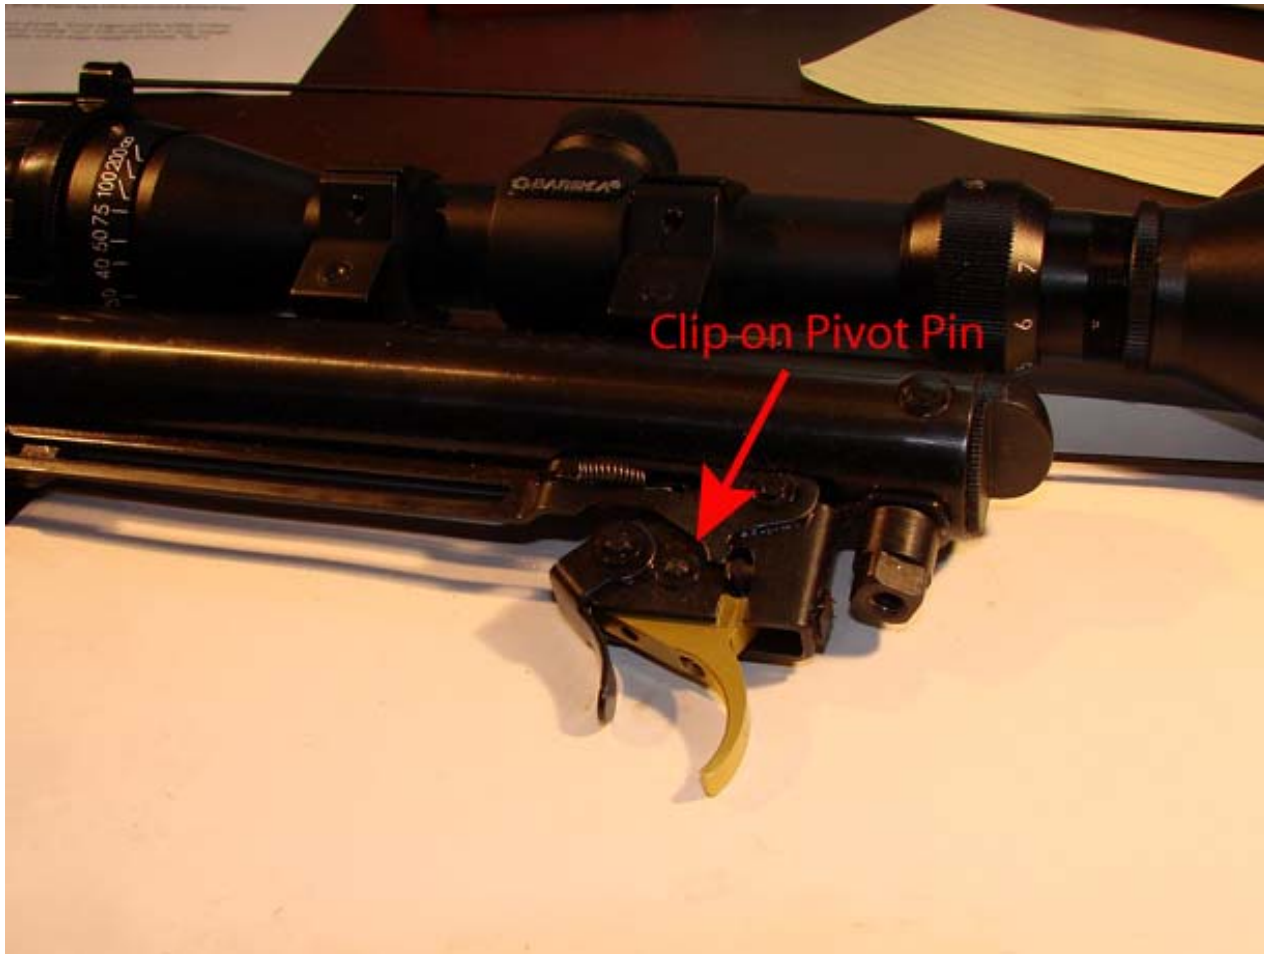

Installed



On Quest and B-18/19's Do This Check for Clearance

